



EZ LIFT PIN DRILLING INSTRUCTIONS

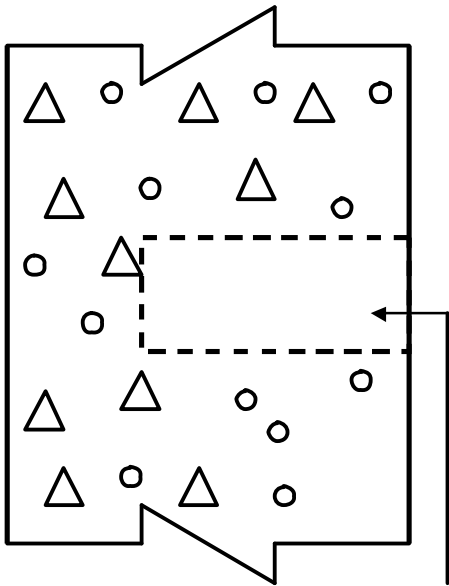

1-1/2" dia. x 4"
drilled hole

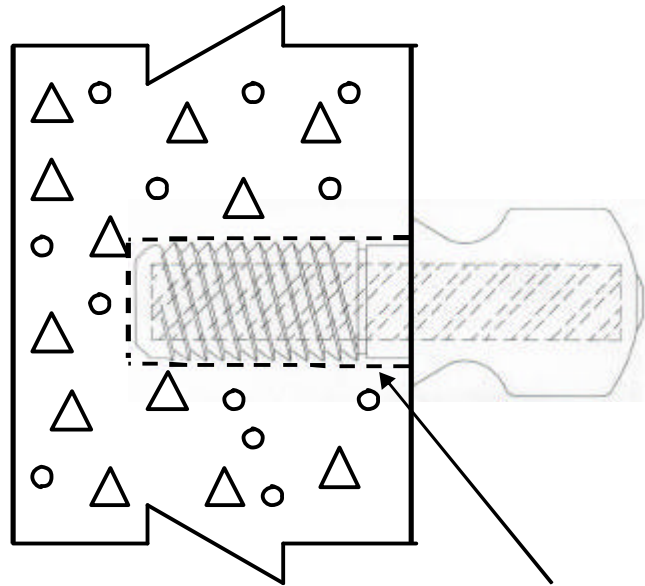

Installed epoxy covered
EZ Lift Pin

INSTALLATION INSTRUCTIONS

1. Drill two 1-1/2" dia. holes 4" deep, on opposite sides of the pipe
2. Remove all gravel and dust particles from the drilled holes
3. Apply epoxy, slurry or non-shrink grout to the barbed end of the pin prior to installation
4. Pound in the EZ Lift Pins with a 6 – 8 lb. sledge hammer



BLACKTHORN, INC.

1-800-836-6113

6113 Brookville Salem Road, Clayton, OH 45315

Tel. (937) 836-9296 • Fax. (937) 836-9395

website: www.blackthorn-inc.com